

C.A.R. PRODUCTS®


makers of fine cleaners

630 Beaulieu Street, Holyoke, MA 01040
Phone 1-800-537-7797 Fax 1-413-536-9979

**H.D. PRE-SOAK
PART #ICS-172
TITRATION PROCEDURE
TITRATION KIT #2
02/26/01**

1. COLLECT SAMPLE FROM APPLICATION NOZZLE, USING 16 OZ. TEST KIT CONTAINER.
2. FILL PLASTIC VIAL TO 25 ML. MARK.
3. ADD 2 DROPS INDICATOR A
4. ADD SOLUTION 2 DROPWISE SLOWLY ONE DROP AT A TIME WITH CONTINUAL SWIRLING AFTER EACH DROP UNTIL ORIGINAL COLOR APPEARS. RECORD NUMBER OF DROPS USED.

<u>USAGE</u>	<u>DROPS</u>
½ %	3
¾ %	4-5
1 %	6
1 ½ %	9
2 %	12
2 ½ %	15
3 %	18
3 ½ %	21
4 %	24
4 ½ %	27
5 %	30

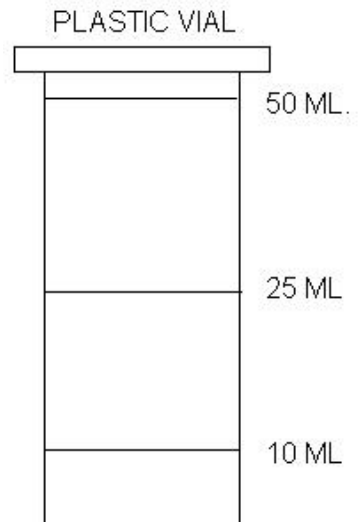

THESE % ARE THE
RECOMMENDED
CLEANING RANGES
FROM MIN. TO MAX.

DROP AMOUNTS
MAY VARY BY ½