

C.A.R. PRODUCTS®

makers of fine cleaners

630 Beaulieu Street, Holyoke, MA 01040
Phone 1-800-537-7797 Fax 1-413-536-9979


**COMPLETE 2000
PART #ICS-147
TITRATION PROCEDURE
TITRATION KIT #2**

1. COLLECT SAMPLE FROM APPLICATION NOZZLE (USING A CLEAN, DRY CONTAINER).
2. TRANSFER 100 ML TO 16 OZ. TEST KIT CONTAINER (USE PLASTIC VIAL)
3. ADD 4 DROPS INDICATOR A.
4. ADD SOLUTION 2 DROPWISE, WITH CONTINUAL SWIRLING UNTIL ORIGINAL COLOR APPEARS. RECORD NUMBER OF DROPS USED.

<u>USAGE</u>	<u>DROPS</u>
1/8 %	1
1/4 %	2
1/2 %	3
1 %	6
1 1/2 %	9
2 %	12
2 1/2 %	15
3 %	18
3 1/2 %	21
4 %	24

THESE % ARE THE
RECOMMENDED
CLEANING RANGES
FROM MIN. TO MAX.

DROP AMOUNTS
MAY VARY BY 1/2

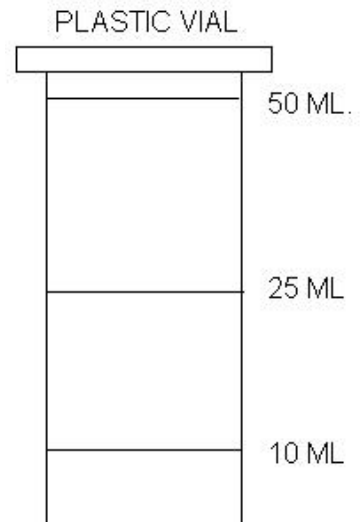

(SEE BACK FOR MORE ACCURATE TITRATIONS 1/2% AND UNDER)

C.A.R. PRODUCTS®


makers of fine cleaners

630 Beaulieu Street, Holyoke, MA 01040
Phone 1-800-537-7797 Fax 1-413-536-9979

**COMPLETE 2000
PART #ICS-147
TITRATION PROCEDURE
TITRATION KIT #4**

1. COLLECT SAMPLE FROM APPLICATION NOZZLE (USING A CLEAN, DRY CONTAINER).
2. TRANSFER 100 ML TO 16 OZ. TEST KIT CONTAINER (USE PLASTIC VIAL)
3. ADD 8 DROPS INDICATOR A.
4. ADD SOLUTION 4 DROPWISE, WITH CONTINUAL SWIRLING UNTIL ORIGINAL COLOR APPEARS. RECORD NUMBER OF DROPS USED.

<u>USAGE</u>	<u>DROPS</u>
.05 %	3
.10 %	6
.15 %	9
.20 %	12
.25 (¼ %)	15
.30 %	18
.35 %	21
.40 %	24
.45 %	27
.50 % (½ %)	30

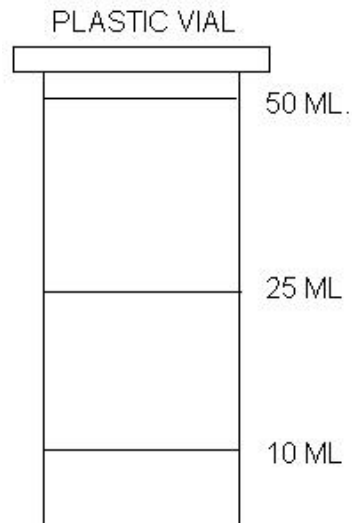

THESE % ARE THE
RECOMMENDED
CLEANING RANGES
FROM MIN. TO MAX.

DROP
AMOUNTS MAY
VARY BY ½